


# DIGITAL TIMER INSTRUCTIONS (T5, T8, T9)

## 1. CONNECT POWER

Plug the power cord into an outlet.

## 2. SETTING THE TIME


- The blue buttons on the side adjust the time up and down left of the colon. To program the digits right-of the colon, (usually seconds) hold down the green “stop/start” button then adjust the blue buttons.
- Model T8 will have buttons on the circuit board inside instead of the blue buttons.

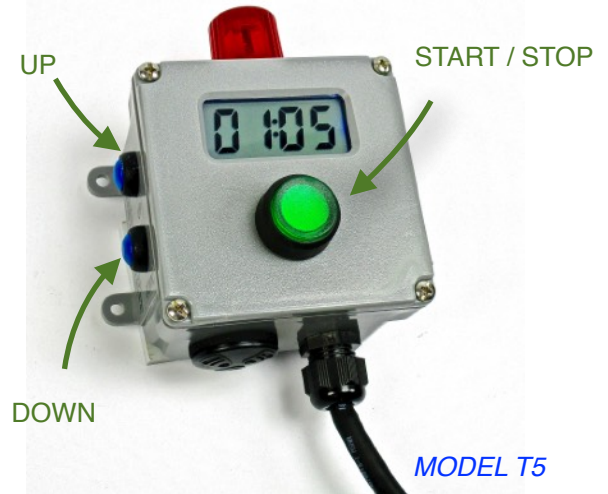

## 3. SELECTING PROGRAM

- Different modes are selected by removing the circuit board jumpers from the pins.
- JUMPER “A” on the pins selects minutes /seconds. For minutes/hours instead, remove jumper “A”.
- The other jumpers provide the logic according the this table.


MODE	JUMPER			DESCRIPTION
	B	C	D	
1	ON	ON	ON	MANUAL CYCLE STOP - CAN CANCEL * †
2	OFF	ON	ON	MANUAL CYCLE STOP - CAN NOT CANCEL
3	ON	OFF	ON	MECHANICAL TRIGGER
4	OFF	OFF	ON	PAUSING †
5	ON	ON	OFF	AUTOMATIC CYCLE STOP - CAN CANCEL *
6	OFF	ON	OFF	EARLY WARNING ON BEACON (LED2)
7	ON	OFF	OFF	GUARD DUTY
8	OFF	OFF	OFF	EARLY WARNING ON FRONT BUTTON (LED1)

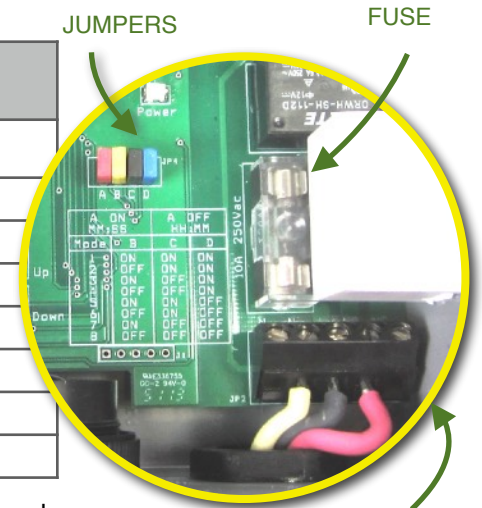

- \* Some cycles allow cancellation by holding the stop button for 2 seconds.
- † Count up from zero available.

## 4. OTHER NOTES

- Relay will support a load of 15A.
- Default wiring is for the relay to be open when unpowered. (N.O.) This can be changed by connecting the pink wire to the N.C. terminal.
- For detailed description of the modes with charts, please go to our website.
- Pressing both blue buttons together resets display to zero time.
- Holding down blue buttons advances the time quickly.

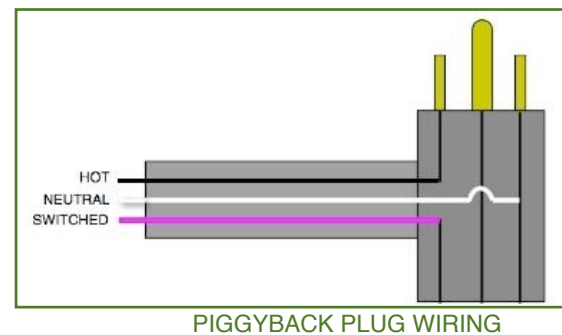

Sep 28, 2017

Firmware Rev 41\_55\_01X