


AUTO HOZE FILLA™

1. GENERAL

- The AutoHoze™ is intended to fill tanks and then be moved - not to be a permanent level control device.

2. SETUP

- Screw a standard garden hose (¾" GHT) into the female threads. (brass)
- We suggest a thread locker so the hose cannot be disconnected from the Auto-Hoze®.

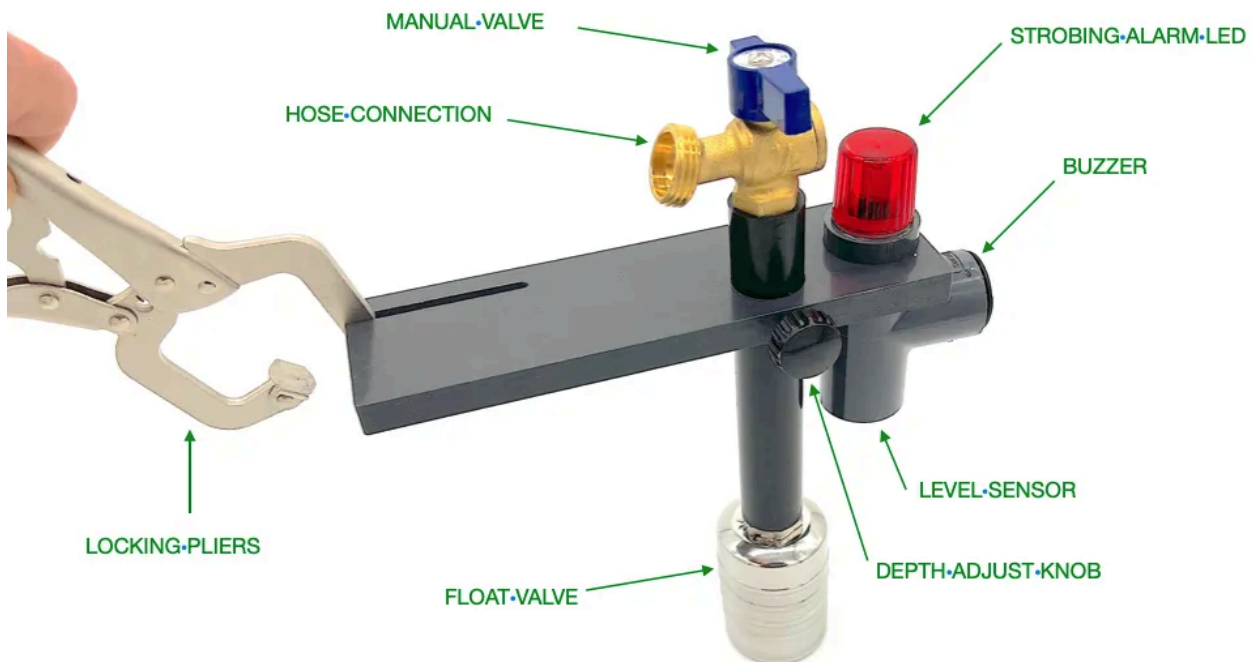

3. FILLING A TANK

- Clamp the locking pliers to the lip of a tank.
- Adjust the depth of the stainless steel float valve with the thumbscrew.
- Open the manual ball valve (blue) to start filling.
- The water flow will stop when liquid is about halfway up the float valve.

4. OVERFILL ALARM

- The unit is equipped with an overflow alarm. If liquid ever reaches the gold contacts, an alarm will sound.
- The overflow alarm has a battery life of more than 10 years if sitting idle, or 48 hours of continuous alarming. This alarm is replaceable.



3 N. NEWARK ST., PHELPS, NY 14532 | 585-301-0970 | gizmo-engineering.com