


PROGRAMMING NEW TRANSMITTER CODES

1. ADDING AN ADDITIONAL TRANSMITTER

- Press the programming button momentarily. LED1 will stay on steadily which means the receiver is ready to accept a new code.
- Provide a code from a transmitter. (by triggering an alarm with the blue button for example) When the code has been accepted, LED1 will blink rapidly about 10 times and then go off.
- The receiver is now paired with the transmitter and ready to operate.

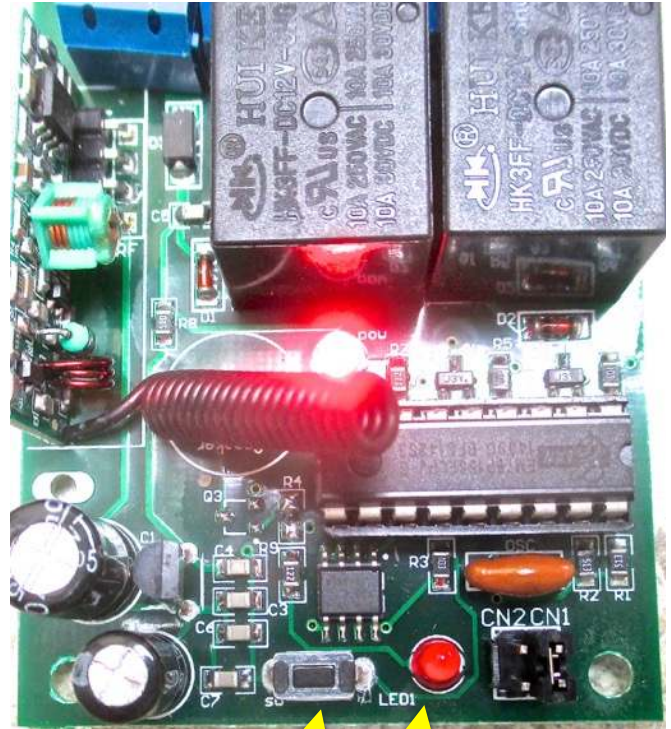

PROGRAMMING BUTTON

LED1

2. CLEAR EXISTING CODES

- Press and hold the programming button for at least 2 seconds. LED1 blink slowly to let you know the old codes have been cleared.
- Press and hold for 2 seconds until LED1 stays on steady. It is now ready to accept a new code.
- Provide a transmitter code (by pressing the green button on the tank alarm for example) LED1 will blink rapidly about 10 times and then go of to let you know the new code has been accepted.
- The receiver is now paired with the transmitter and ready to operate.

3. OTHER INFO

- The Jumpers (CN1, CN2) should be off the pins. This controls the relay behavior either latching, momentary, or toggle mode.