


CHECK VALVE INSTALLATION

1. INSERT "SHORT NIPPLE - UNSLOTTED"


- If retrofitting an existing drumalarm, the short nipple, screen, and slotted nipple should already be installed.
- Use a tool such as a large screwdriver insert (or reposition) the unslotted short nipple. It must be at least 36 mm deep for all the components to fit.

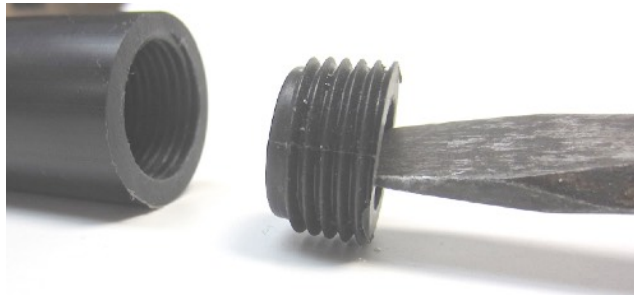

INSERTING SHORT NIPPLE (NO SLOT)

2. INSERT OTHER COMPONENTS

- To insert components with slots, the provided mending brace can be used to turn the slotted pieces.

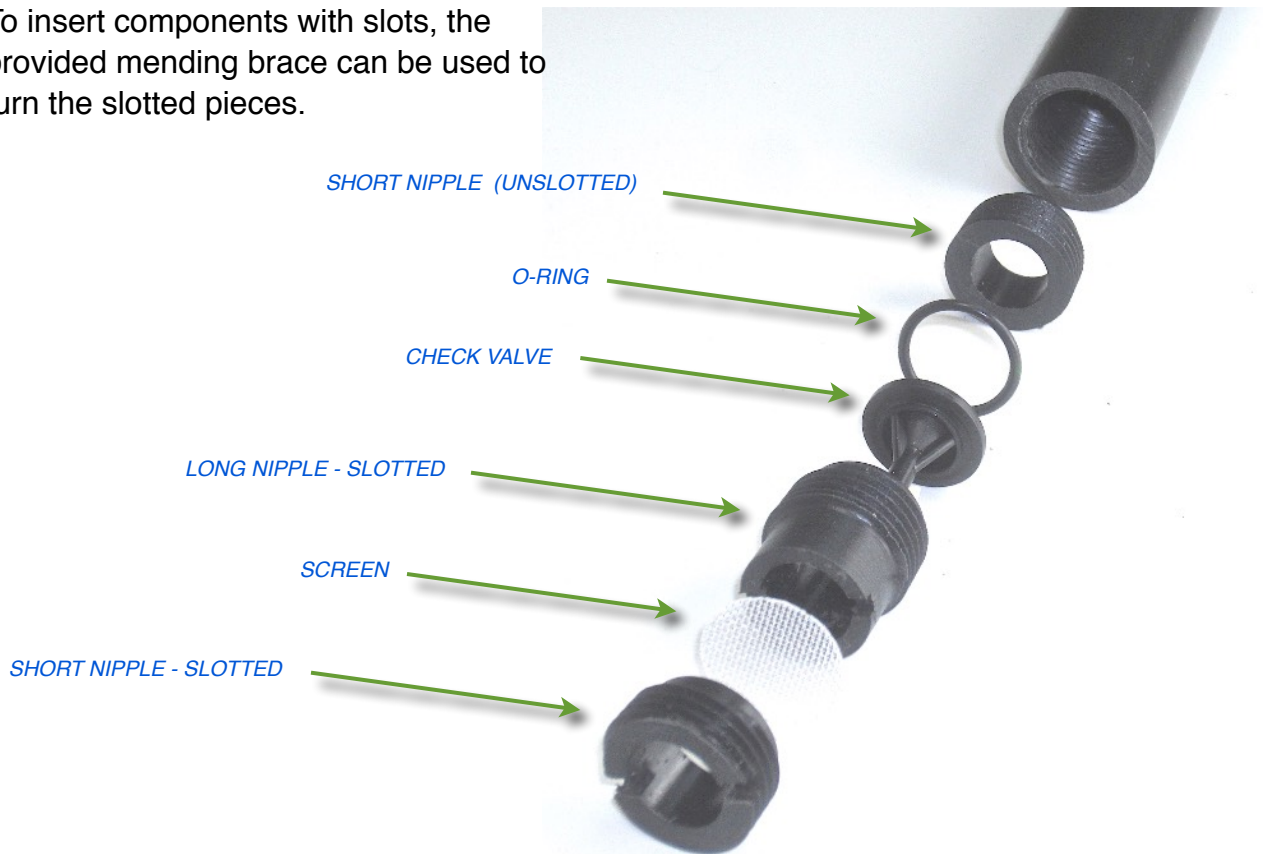

Aug 17, 2020