

RESIN MIXER RM-1000

The model RM-1000 mixing machine is designed from the ground up to mix messy resins with no cleanup.

1. Plug in the 12VDC power supply provided.




2. Loosen the thumbscrew on the blue chuck plate to adjust the chuck diameter to your mixing container.

3. Tighten the same thumbscrew above if desired.

4. Insert a mixing paddle in the slot in the horizontal arm.

5. Adjust the position of the horizontal arm if necessary with the thumbscrew in the vertical post.

6. Turn on the mixer with the speed knob to desired speed. Slower mixing will reduce or eliminate air bubbles.

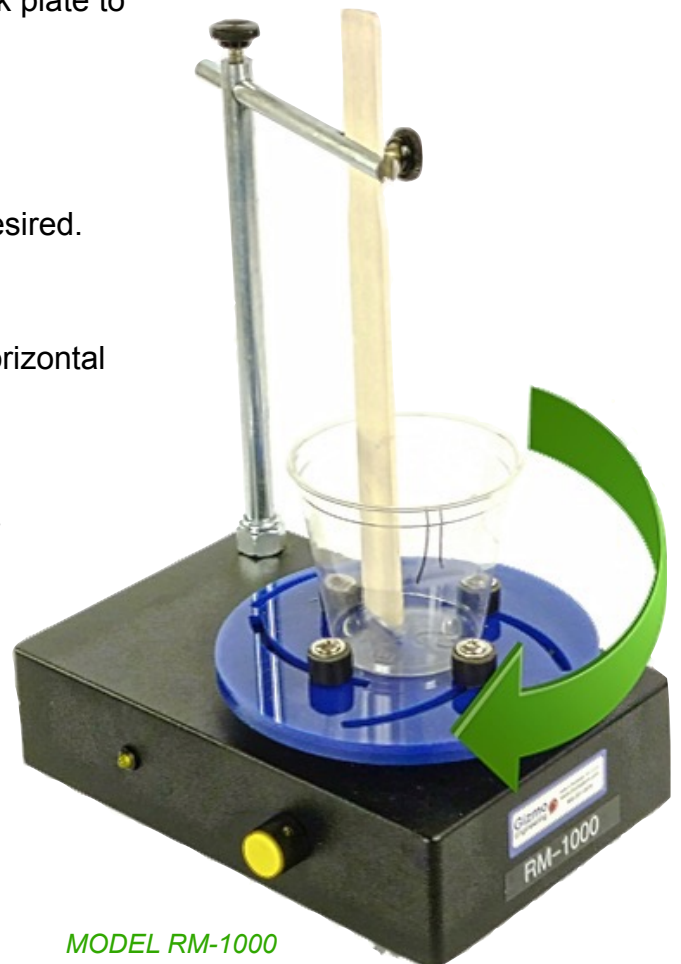

MODEL RM-1000

