



DL6 DATA EXPORT BY USB

1. GENERAL


- This instruction covers how to export data using the USB port on the DL6 dataloggers.

2. PROCEDURE

1. Plug a flash drive into the USB port. The download begins automatically and takes up to 2 minutes.
2. When the progress bars says "Save Data...OK" then you may remove the flash drive.
3. The file is in the format ".DAT" which will not open directly in MS Excel. The easiest way to work with it is to use the special software called MDCS. (provided)
4. Open the MDCS program.
5. Import the file on the flash drive.
6. It may be viewed in MDCS, or, to export it to a .XLS format, click the "Export to Excel" tab.
7. Select the date range of interest. (otherwise there will be a lot of readings which will take a long time)
8. Click "export" button.

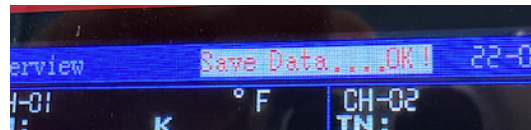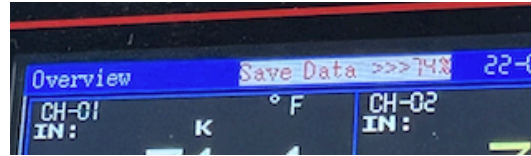

DATA SAVED

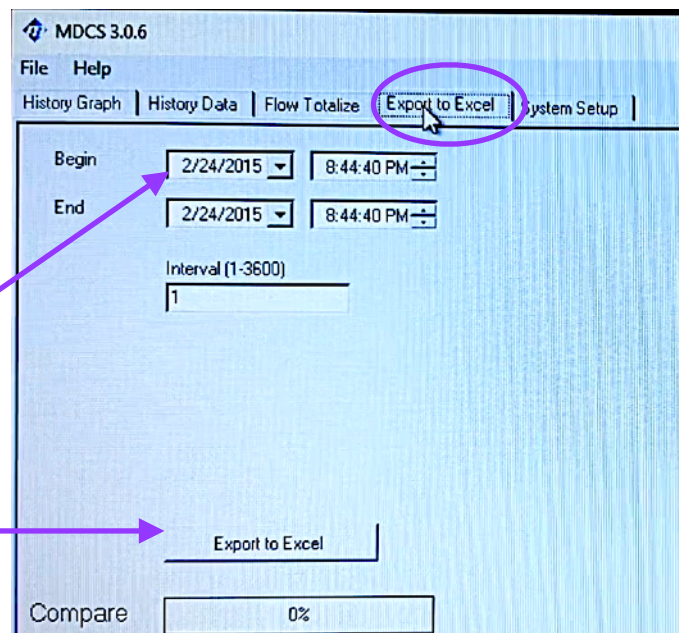

3. VIDEO INSTRUCCIONS

- video instructions [here](#)



3 N. NEWARK ST., PHELPS, NY 14532 | 585-301-09770 | gizmo-engineering.com